



Removing Casio CTK-501 Bottom Panel

Written By: Jimmy Winne





TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Bottom Panel



- Flip the keyboard upside down so the bottom is angled towards you.

Step 2




- Use a #2 Phillips screwdriver to remove the twenty-seven 12 mm screws from the dark gray bottom panel.

Step 3



- Remove the bottom panel by lifting the bottom panel up and outward from yourself.

Step 4

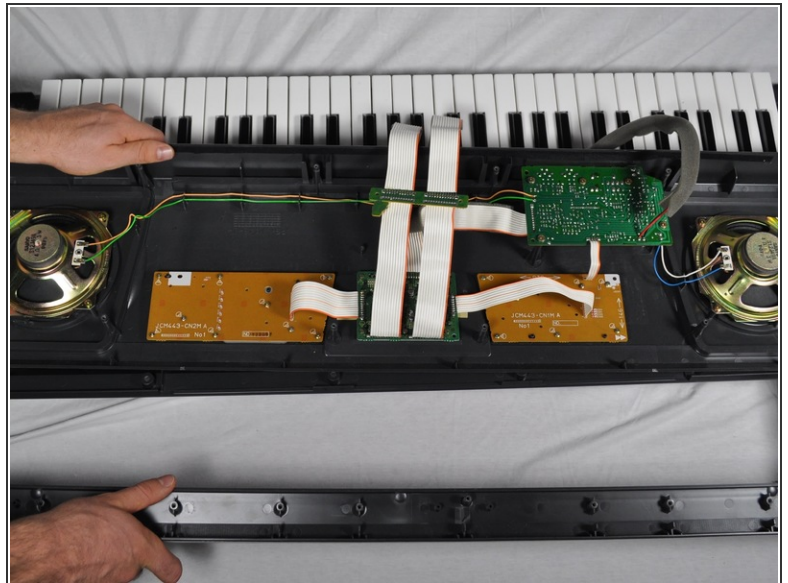

Flip the entire keyboard so the keys face up, and be careful not to let the bottom drop.

- Flip the top half of the keyboard and set onto the bottom half with the internal parts facing up.

To reassemble your device, follow these instructions in reverse order.

